

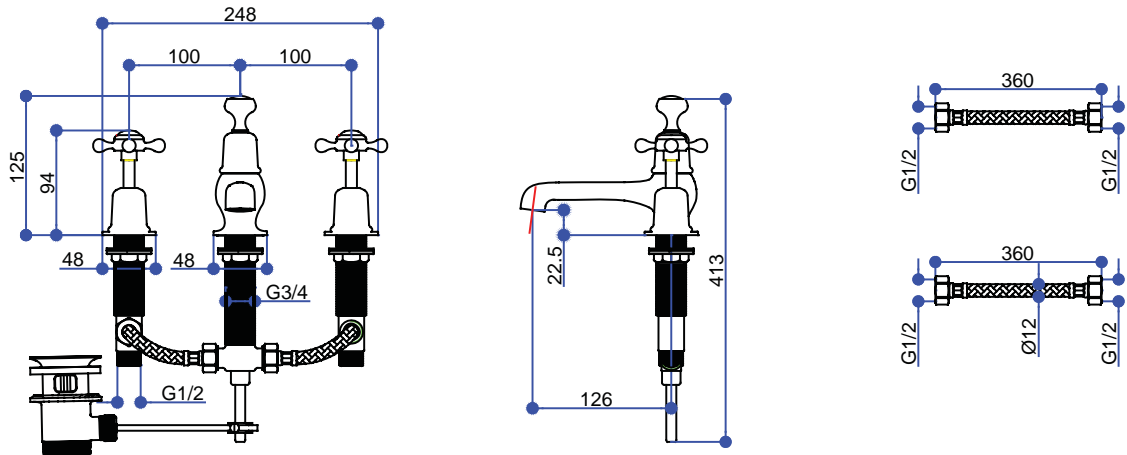



Dimension

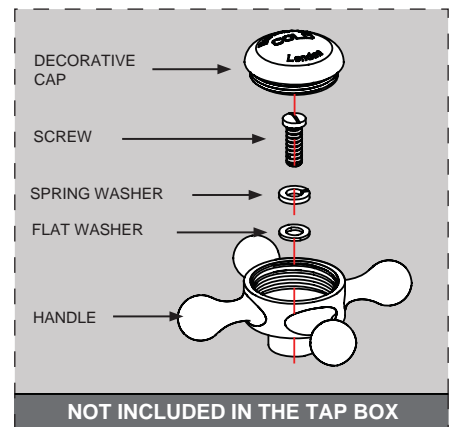

Installation

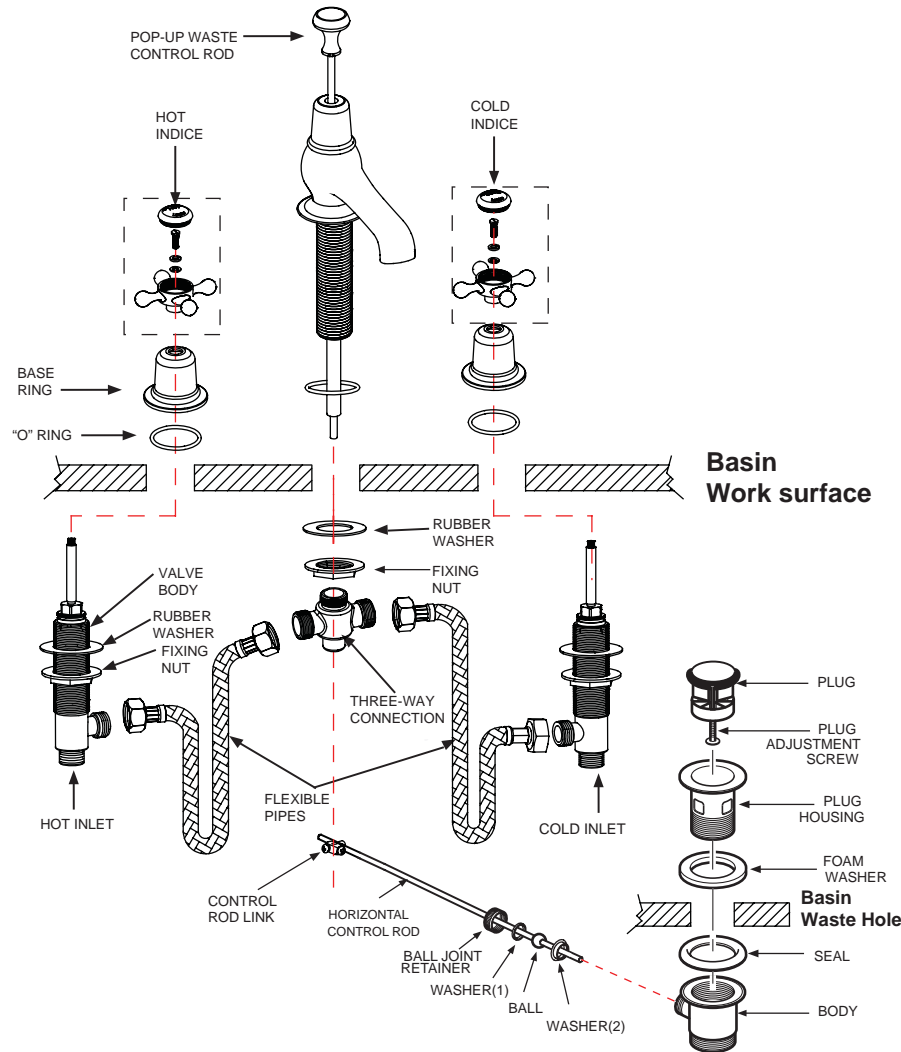

Operation

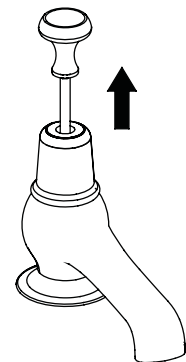

This Burlington product has a pop-up waste, that is operated by pulling up the handle on the spout body.

- Install the Central main body part:
 - Fit the "O" ring into the groove on the underside of the tap main body.
 - Then insert the tap main body into the centre hole on the basin from above.
 - Tight the fixing nut and fix the main body on the basin.
 - Screw on the three-way connection at the tail of tap main body.
- Install the Left and Right control valve part:
 - Fit the "O" ring into the groove on the underside of both tap valve cover.
 - Screw the rubber washer and fixing nut onto the valve .
 - Insert the two valve bodies into left and right hole on the basin from bottom.
 - Tight the valve cover and fix it together with the valve body.
- Use two flexible pipes to connect from middle three-way connection to both left and right valve bodies.
- Connect the water supply pipe to the tap control valve with the hot water on the left and cold water on the right. (Viewer from the front.)
- Install Pop-Up Waste:
 - Insert the Pop-Up control rod into the tap main body .
 - Insert the pop up waste on the basin and tighten.
 - Insert the horizontal control rod into the waste, and tight the ball joint retainer to make sure the ball with two washers on bath sides are fix with the waste.
 - Connect the pop-up control rod with the horizontal control rod.
 - Test the pop-up waste function, adjust the connection between pop-up control rod and horizontal control rod , or the ball joint retainer if necessary.